7” HEDREST/STAND ALONE TFT LCD MONITOR

USER’S MANAUL

BEFORE OPERATING THE MONITOR, PLEASE READ THIS MANUAL THOROUGHLY
AND KEEP IT FOR FUTURE REFERENCE

◎ SPECIFACATION:

Display area		154.08(H) x 86.58(V)			mm
Number of Pixel		1440(H) x234(V)			pixels
Pixel pitch		0.321(H) x 0.370(V)			mm
Pixel arrangement		RGB Vertical stripe			
Back-light		Single CCFL (Side-Light type)			
Power Consumption	Logic System	36.4(Typ.)			mW
	B/L System	3.2(Typ.)			W
Item		**Symbol**	**Min.**	**Max.**	**Unit**
Lamp current		I_L	0	7.0	mA
Lamp frequency		f_L	0	100	KHz
Operating Temp.		T_{opa}	-10	60	℃
Storage Temp.		T_{stg}	-20	70	℃
Contrast			250	350	
Response time		Rising	5		m sec
		Falling	20		m sec
White luminance (Center)			340	400	cd/m_2
Viewing angle		R: 60 / L:60	U:40 / D:60		Θ

◎ FEATURE & FUNCTIOIN:

1.SUPPORT NTSC/PAL/SECAM GLOBAL VIDEO SYSTEM.
2.HEAD REST AND STAND ALONE LCD MONITOR.
3.SUPPORT 2 * A/V SIGNAL INPUT, ONE IS RCA, ANOTHER IS EAR PHONE JACK.
4.POWER INDICATED LED
5.WITH STEREO EAR PHONE JACK*1
6.BUILD IN WIRELESS IR TRANSMITTER (OPTIONAL), FRONT RECEIVED ANGIE IS 180°.
WHEN MONITOR IN MUTE STATUS, IT STILL CAN WORK.
7.WITH OSD FUNCTION, AND REMOTE CONTROLLER.
8.SCREEN UP/DOWN/RIGHT/LEFT FUNCTION (BY MENU).
9.BUILD IN 8Ω 1W SPEAKER *1

◎ FUNCTION DESCRIPTION:

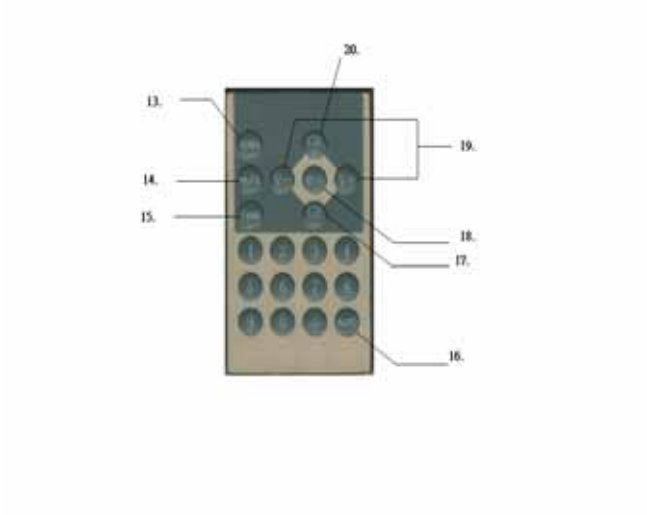

A. FRONAT PANEL KEY DESCRIPTION.

1. AUDIO IR TRANSMITTER WINDOW
2. VOLUME DOWN
3. VOLUME UP
4. AV1/AV2 SELECTED, ENTER FOR MENU
5. MENU
6. POWER
7. REMOTE CONTROL IR RECEIVER
8. POWER INDICADTE LED
9. EAR PHONE JACK
10. AV2 INPUT (PHONE JACK)
11. PIG TAIL FOR AV1 & POWER INPUT
12. STAND FOR CAR INSTALLATION

B. REMOTE CONTROLLER

13. POWER
14. MUTE
15. AV1/AV2 SELECTED, ENTER FOR MENU
16. RESET/DEFAULT
17. LIST DOWN FOR MENU
18. MENU
19. VOLUME + / -
20. LIST UP FOR MENU

C. OSD FUNCTION DESCRIPTION (PRESS “MENU” IN):

	Range Setting				
	Item	**Min.**	**Max.**	Defuat Value	**Step Value**
MAIN MENU	Brightness	0	50	25	1
	Contrast	0	50	25	1
	Saturation	0	50	25	1
	Hue	0	50	25	1
	Sharpness	0	4	2	1
	Volume	0	31	15	1
	Aspect Ratio		16:9/ 4:3		
	Mirror		RU / LU / LD / RD	SCREEN UP, DOWN, RIGHT, LEFT	
	Video system		NTSC/PAL/AUTO	AUTO	
	Default				

◎ THE ACCESSORIES

MONITOR STAND

K- 513

CIGAR CAR CHARGER

100~240V AC-DC12V Power Adaptor

Head Rest Frame

Remote Controller

◎ CONNECTIONG AND USING:

1. INSTALL THE STAND WITH MONITOR
2. PLUG THE MONITOR PIG TAIL WITH AV/POWER CABLE (K-513).
3. CONNECT THE RCA A/V SIGNAL (ex. DVD PLAYER) AND DC+12V TO K-513.
4. POWER LED LIGHTING, PRESS THE POWER KEY ON THE MONITOR, OR ON REMOTE CONTROLLER, START USE.

◎ PARTS&ACCESSOIES:

7” TFT LCD MONITOR
HEADREST FRAME (OPTIONAL)
REMOTE CONTROLLER
MONITOR STAND
AV/POWER CABLE FOR MONITOR (K-513)
AC-DC POWER ADAPTOR/CIGAR CAR CHARGER.
USRE’S MANUAL
WHITE BOX/COLOR BOX